

ARMOURLITE WATCH COMPANY



Instructions & Warranty

CONTENTS OF THIS BOOKLET


2-3	WATCHES WITH DATE DISPLAY
4-5	WATCHES WITH DATE DISPLAY AND GMT 24-HOUR HAND
6-7	WATCHES WITH DAY & DATE DISPLAY
8-13	WATCHES WITH CHRONOGRAPH FUNCTION
14-15	WATCHES WITH 24-HOUR DIAL
16-17	WATCHES WITH MECHANICAL MOVEMENT
18-21	POCKET WATCHES WITH ALARM CLOCK FUNCTION
22-23	USING THE ROTATING BEZEL
24-25	GENERAL CARE AND MAINTENANCE GUIDELINES
26-27	WARRANTY INFORMATION
28	SERVICE INFORMATION

Register your new watch: www.armourlite.com/register

MODEL
NUMBER

PURCHASE
DATE

PURCHASED FROM

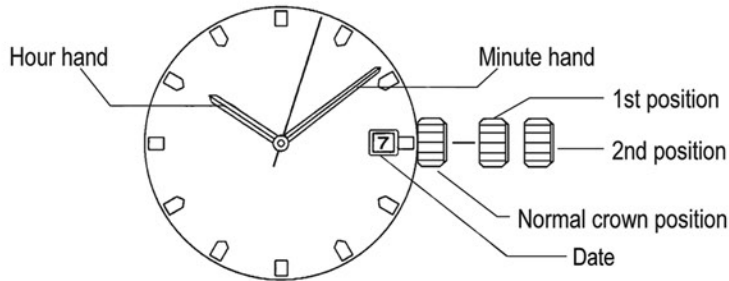
**SETTING THE TIME (SCREW CROWN OR PUSH CROWN)**

1. **SCREW:** Unscrew and pull out the crown to the 2nd position.
PUSH: Pull out the crown to the 2nd position.
2. Rotate the crown to set the hour and minute hands.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

SETTING THE DATE (SCREW CROWN OR PUSH CROWN)

1. **SCREW:** Unscrew and pull out the crown to the 1st position.
PUSH: Pull out the crown to the 1st position.
2. Rotate the crown clockwise (upward) to set the date.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

If the date is changed between 9:30 PM and 12:00 AM, set the date to the following day because no date change will take place at midnight.

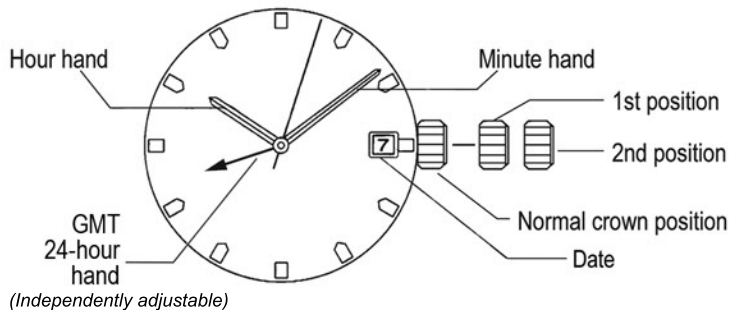

If the date is changed between 10:00 PM and 12:00 AM, set the date to the following day because no date change will take place at midnight.

SETTING THE TIME (SCREW CROWN OR PUSH CROWN)


1. **SCREW:** Unscrew and pull out the crown to the 2nd position.
PUSH: Pull out the crown to the 2nd position.
2. Rotate the crown to set the hour and minute hands.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

SETTING THE GMT 24-HOUR HAND (SCREW CROWN OR PUSH CROWN)

1. **SCREW:** Unscrew and pull out the crown to the 1st position.
PUSH: Pull out the crown to the 1st position.
2. Rotate the crown counter clockwise (downward) to set the GMT 24-hour hand.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

SETTING THE DATE (SCREW CROWN OR PUSH CROWN)

1. **SCREW:** Unscrew and pull out the crown to the 1st position.
PUSH: Pull out the crown to the 1st position.
2. Rotate the crown clockwise (upward) to set the date.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

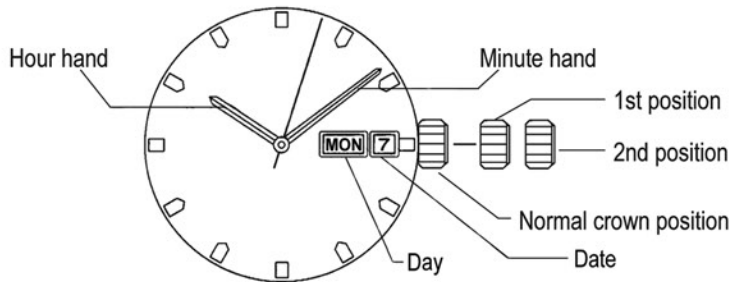
**SETTING THE TIME (SCREW CROWN OR PUSH CROWN)**

1. **SCREW:** Unscrew and pull out the crown to the 2nd position.
PUSH: Pull out the crown to the 2nd position.
2. Rotate the crown to set the hour and minute hands.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

SETTING THE DATE & DAY (SCREW CROWN OR PUSH CROWN)

1. **SCREW:** Unscrew and pull out the crown to the 1st position.
PUSH: Pull out the crown to the 1st position.
2. Rotate the crown clockwise (upward) to set the date.
3. Rotate the crown counter-clockwise (downward) to set the day and language (English or Spanish).
4. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

If the date is changed between 10:00 PM and 12:00 AM, set the date to the following day because no date change will take place at midnight.

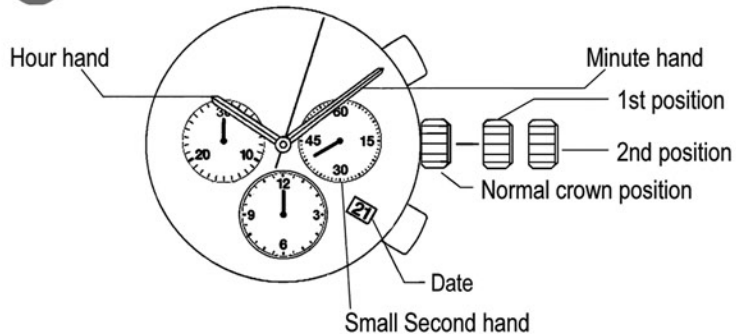

If the date is changed between 9:00 PM and 12:00 AM, set the date to the following day because no date change will take place at midnight.


SETTING THE TIME (SCREW CROWN OR PUSH CROWN)

1. **SCREW:** Unscrew and pull out the crown to the 2nd position.
PUSH: Pull out the crown to the 2nd position.
2. Rotate the crown to set the hour and minute hands.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

In order to set the time to the exact second, make sure to pull out the crown to the 2nd position when the second hand is at exactly 60 seconds.

SETTING THE DATE (SCREW CROWN OR PUSH CROWN)

1. **SCREW:** Unscrew and pull out the crown to the 1st position.
PUSH: Pull out the crown to the 1st position.
2. Rotate the crown clockwise (upward) to set the date.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

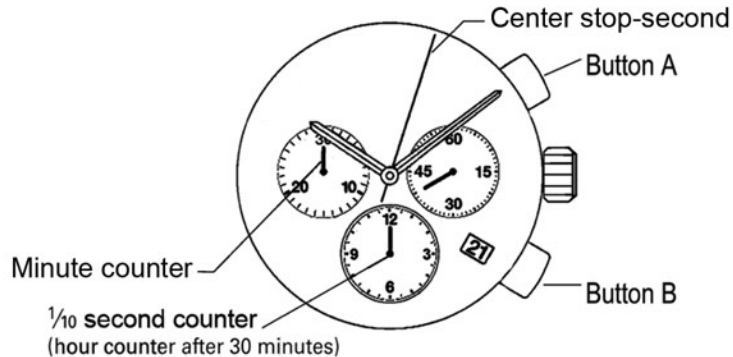

MEASURING TIME WITH THE CHRONOGRAPH

BASIC FUNCTION

Start: Press push-button A to begin.

Stop: Press push-button A again and read the 3 chronograph counters.

Reset: Press push-button B to reset the 3 chronograph hands.

ACCUMULATED TIMING

Start: Press push-button A to begin.

(Restart/Stop process can be performed as many times as necessary)

Stop: Press push-button A stop.

Restart: Press push-button A to restart.

Stop: Press push-button A and read the 3 chronograph counters.

Reset: Press push-button B to reset the 3 chronograph hands.

INTERVAL TIMING

Start: Press push-button A to begin.


Display Interval: Press push-button B.

Making up the measured time: Press push-button B again.

Stop: Press push-button A and the final time is displayed.

Reset: Press push-button B to reset the 3 chronograph hands.

(After the "Making up the measured time" step, display further intervals by pressing push-button B)

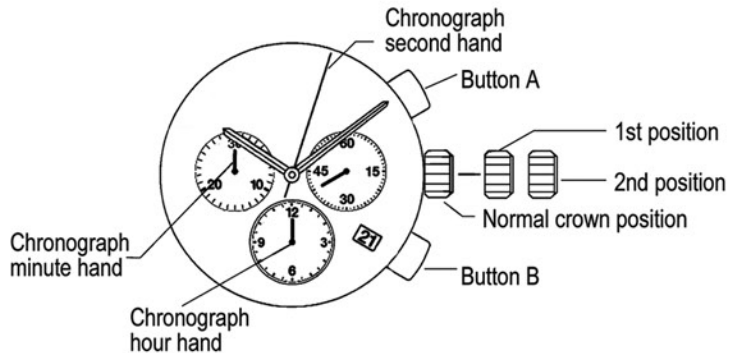

RESETTING THE HANDS OF THE CHRONOGRAPH

Adjustment will be necessary if one or several chronograph hands are not in their correct zero positions. This can occur following a battery change.

1. **SCREW:** Unscrew and pull out the crown all the way to the 2nd position.
PUSH: Pull out the crown to the 2nd position.
2. Press push-buttons A and B at the same time for at least 2 seconds. The center stop-second will rotate 360° and corrective mode will be activated.

Adjusting the center stop-second hand

- Press push-button A (short press for single step / long press for continuous move)

>> Press push-button B to adjust the next hand.

Adjusting the 1/10 second counter hand


- Press push-button A (short press for single step / long press for continuous move)

>> Press push-button B to adjust the next hand.

Adjusting the minute counter hand

- Press push-button A (short press for single step / long press for continuous move)

3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

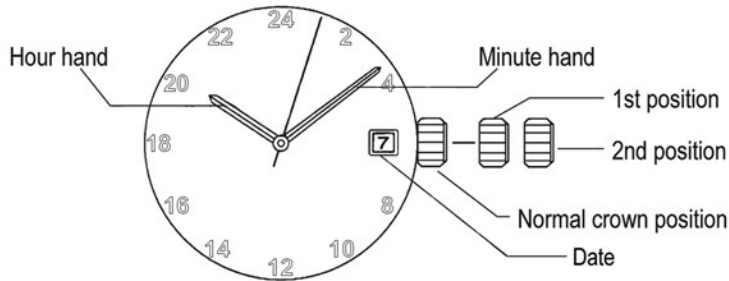
**SETTING THE TIME (SCREW CROWN OR PUSH CROWN)**

1. **SCREW:** Unscrew and pull out the crown to the 2nd position.
PUSH: Pull out the crown to the 2nd position.
2. Rotate the crown to set the hour and minute hands.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

SETTING THE DATE (SCREW CROWN OR PUSH CROWN)

1. **SCREW:** Unscrew and pull out the crown to the 1st position.
PUSH: Pull out the crown to the 1st position.
2. Rotate the crown clockwise (upward) to set the date.
3. **SCREW:** Push the crown back in and screw it back to the normal position.
PUSH: Push the crown back in to the normal position.

If the date is changed between 10PM (22:00) and 12AM (24:00), set the date to the following day because no date change will take place at midnight.

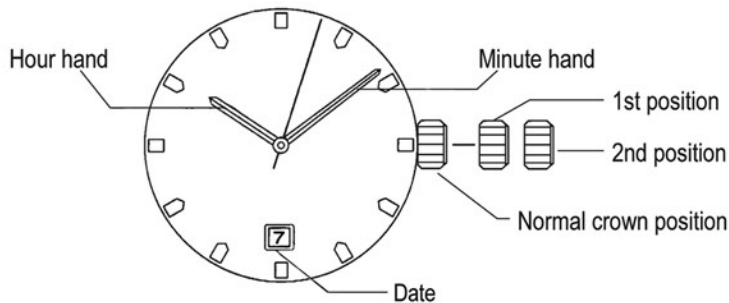**SETTING THE TIME (SCREW CROWN)**


1. Unscrew and pull out the crown to the 2nd position.
2. Rotate the crown to set the hour and minute hands.
3. Push the crown back in and screw it back to the normal position.

SETTING THE DATE (SCREW CROWN)

1. Unscrew and pull out the crown to the 1st position.
2. Rotate the crown clockwise (upward) to set the date.
3. Push the crown back in and screw it back to the normal position.

If the date is changed between 10:00 PM and 2:00 AM, set the date to the following day because no date change will take place at midnight.

The watch can be hand wound by turning the crown in the normal crown position about 30 times and then shaking the watch slightly.

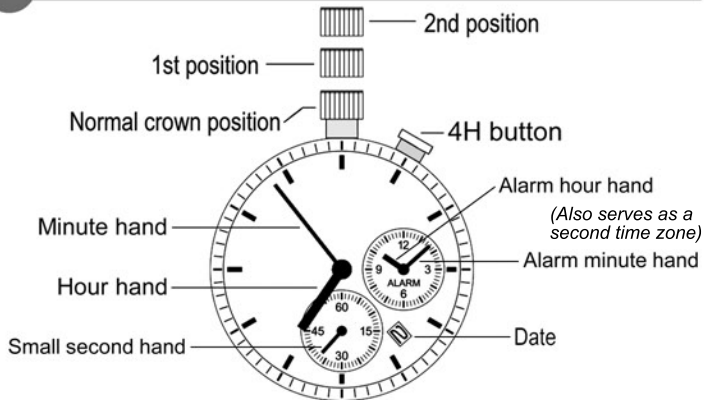

SETTING THE DATE


1. Pull out the crown to the 1st position.
2. Rotate the crown clockwise (upward) to set the date.
3. Push the crown back in to the normal crown position.

SETTING THE REAL TIME AND THE TIME ON THE ALARM DIAL

1. Pull out the crown to the 2nd position.
2. To set the REAL TIME, rotate the crown to set the hour and minute hands.
3. To set the TIME ON THE ALARM DIAL, press the 4H button repeatedly until you set the alarm hour and minute hands to match the REAL TIME set in the previous step. The alarm hands move quickly when the 4H button is kept pressed. You can also set the alarm hour and minute hands to another time to serve as a second time zone. The alarm cannot be set to ring if the TIME ON THE ALARM DIAL is set to a second time zone.
4. Push the crown back in to the normal crown position.

For step-by-step video instructions for setting the alarm to ring on your pocket watch, please visit: www.armourlite.com/pocketwatch

USING THE ALARM CLOCK FUNCTION

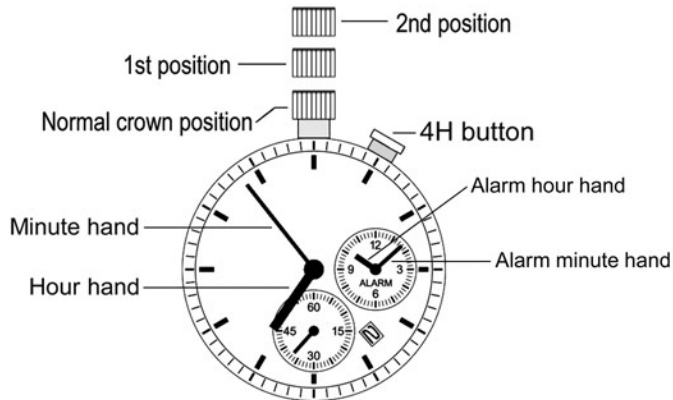

SETTING THE ALARM TO RING


(The alarm can be set to ring at any time within the coming 12 hours. Once the alarm rings, it does not repeat. In order for the alarm to ring again, it must be set again.)

1. Make sure the REAL TIME and the TIME ON THE ALARM DIAL match (as set in the instructions on the previous page).
2. Pull out the crown to the 1st position.
3. To set the alarm to ring at a desired time, press the 4H button repeatedly to move the alarm hour and minute hands to the desired time. The alarm hands move quickly when the 4H button is kept pressed. The hands stop when they reach the current REAL TIME. At this point release the 4H button and press it again to move the hands further.
4. Push the crown back in to the normal crown position. The alarm is now set to ring.

STOPPING THE ALARM WHEN IT RINGS: The alarm will ring for 20 seconds. You can also stop the ringing by pressing the 4H button.

CANCELING THE ALARM BEFORE IT RINGS

1. Pull out the crown to the 1st position.
2. Press the 4H button repeatedly to move the alarm hour and minute hands until they match the REAL TIME.
3. Push the crown back in to the normal crown position.

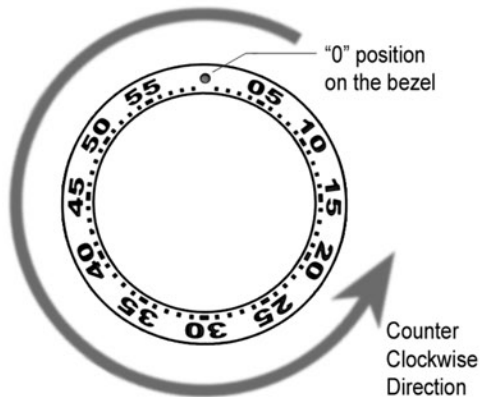

The rotating bezel found on select ArmourLite and Isobrite models is used to track elapsed time. It is often used when scuba diving to track bottom time.

USING THE ROTATING BEZEL

1. Rotate the bezel counter clockwise (downward) until the "0" position on the bezel lines up with the location of the minute hand on the dial.
2. Track elapsed time by checking the minute hand against the bezel numbers, not the dial numbers.

The bezel is designed to only rotate counter clockwise (downward). Never try forcing the bezel to rotate clockwise (upward) as this can damage the watch. It is normal to hear a ratcheting sound when rotating the bezel. This ratcheting allows the bezel to stop exactly where the minute hand is at. Some Isobrite models feature a second tritium marker located at the "15" position on the bezel, which serves as a 15-minute elapsed time indicator.

BATTERY END-OF-LIFE (EOL) FEATURE

Most of the quartz movements in the ArmourLite and Isobrite watches have an end-of-life (EOL) feature to indicate the battery voltage is getting low. Electronic circuits in the movements make the second hand move forward erratically to alert you that it is time to replace the battery. Installing a new battery should restore the second hand to advance normally.

BATTERY REPLACEMENT

Battery replacement should only be performed by an authorized ArmourLite Watch Company service center to ensure the gaskets in the watch are replaced and a pressure test is performed.

PROLONGING BATTERY LIFE WHEN STORING YOUR WATCH

When storing your watch for a period of time, leave the crown in the 2nd position to prolong battery life.

CRYSTAL

ArmourLite and Isobrite watches are fitted with either a shatterproof Armourglass crystal or a sapphire crystal, depending on the model. The Armourglass crystal can withstand extreme impacts when the watch is being worn. The sapphire crystal is highly scratch resistant and anti-reflective. A damaged crystal should be replaced immediately.

WATER RESISTANCE

Your watch is water resistant and tested to the pressure indicated on the dial or case-back of the watch. A watch with a water resistance of 50M is suitable for water related activities but not submersion in water. A watch with a water resistance of 100M and higher is suitable for diving. More importantly, your watch is water resistant only when the crown is screwed in or pushed in all the way. Do not operate the crown or buttons when the watch is wet or submerged in water.

CLEANING YOUR WATCH

Rinse your watch with fresh water after it has been exposed to salt water or chemicals (i.e.: sunscreen, fragrances).

Your new watch is warrantied by ArmourLite Watch Company for a period of twenty-four (24) months from the original date of purchase from an authorized dealer/seller.

The limited warranty covers material and manufacturing defects existing at the time of purchase. During the warranty period and by presenting a valid and dated purchase receipt from an authorized dealer/seller, you will have the right to have the material and manufacturing defects repaired. If the defects cannot be repaired, ArmourLite Watch Company may, at its discretion, replace your watch.

The limited warranty does not cover:

1. Normal wear-and-tear and/or aging of the case, crown, crystal, bezel, battery, band, and plating of metal components;
2. Any damage to any part of the watch resulting from abnormal or abusive use, lack of care, negligence, incorrect use of the watch, nonobservance of the directions for use, or handling of the watch by third parties not authorized by ArmourLite Watch Company (e.g. for battery replacement, services or repairs);
3. Watches purchased from an unauthorized dealer/seller.

For both warranty and non-warranty repairs, please print and complete the repair form found online at:

www.armourlite.com/repairs

Send the completed form with your carefully packaged watch (no box or accessories) to the shipping address on the form.

Please include the following:

- Legible copy of the original and dated purchase receipt.
- \$10.00 check or money order to cover the return shipping charges (\$29.00 for shipping outside of the United States).

We highly recommend you send your watch using a traceable shipping service with insurance. If your repair is not covered under warranty, we will contact you to discuss repair options.

www.armourlite.com