


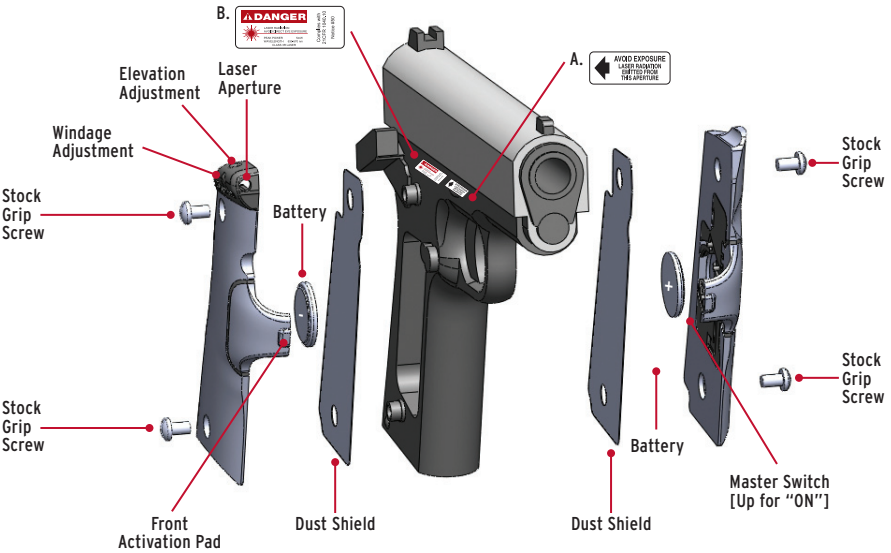


BATTERIES

Two (2) CR2025 or DL2025 Lithium Cells.

PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 633 nm, Class 3R laser
DOT SIZE: Approximately 0.5 inches diameter at 50 feet
BATTERIES: Two #2025 lithium batteries;
over four hours of illumination
ACTIVATION: Front-located integrated momentary
pressure pad and master ON/OFF switch
WARRANTY: Three-year full warranty
This product complies with 21 CFR 1040.10

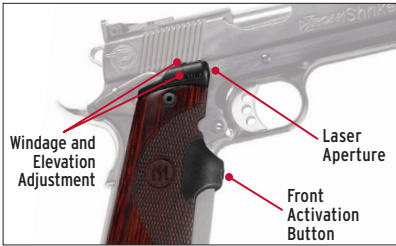

Note: Image above represents only one of the Master Series material options.

INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Handbook.)
2. Remove existing grips. Retain stock screws to be used with Lasergrips®.
3. Place one battery in each Lasergrips panel with positive (+) side up.
4. Install dust shield panels between Lasergrips and frame of pistol.
5. Wrap Lasergrips around frame of pistol. Replace and tighten screws.
6. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
7. To activate Lasergrips, slide the master ON/OFF switch forward to the ON position. The switch is located on the left side of the Lasergrips. Press pressure activation pad located in center of rubber front strap directly beneath trigger guard to activate the laser.
8. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.