

380 USER GUIDE

Unload the weapon.

Physically and visually inspect the chamber, bore, and magazine well to ensure that all ammunition has been removed.

Unload ammunition from any magazines that will be used in training.

Store ammunition in an area that is separate from your training area.

 Always personally verify that all ammunition has been removed before training.

Do not allow any live ammunition in the training area.

Warning – firearms can cause serious injuries or death.

Unscrew the laser cartridge and insert the battery pack according to the drawing (flat side facing up). Reassemble the laser cartridge carefully. Verify the threading is fully closed and that there is no gap.



Retract the slide and engage the slide stop in the open position. Make sure the slide is held firmly by the stop.

 Do not continue if the slide is not held firmly or the slide stop is not in good working order.



While pointing the barrel down, insert the laser cartridge into the handgun by "dropping" it, laser first, through the slide opening into the chamber.



Still pointing down, release the slide stop. Point the weapon at a safe backstop and pull the trigger to verify that the unit is properly installed and functioning.



Disassembly: Retract the slide and engage the slide stop in the open position. Insert a pencil, flat side first, into the barrel and push the Laser Cartridge gently out.

Remove battery when laser cartridge is not in use.

- Using the SureStrike Laser Cartridge not according to the user guide will void the warranty.

All firearms are potentially dangerous and can cause a great harm, personal injury and death. It is your responsibility and legal obligation to handle, load, unload, use, transport, maintain and store your firearm in a safe manner.

No liability is expressed or implied for damage or injury as a result of installation or use of this product. Warranty is limited to the replacement or repair of the original product only.