



PRODUCT SPECIFICATIONS

LIGHT INTENSITY: 100 lumen LED

BATTERIES: One (1) CR2 lithium battery;
over two hours of illumination

ACTIVATION: Front-located integrated momentary
pressure pad

WARRANTY: Three-year full warranty

COMPATIBILITY: LG-617, LG-619, LG-850, LG-851 Lasergrips®.
Refer to your Laser Sight Owners Handbook
for complete instructions regarding Lasergrips.



WARNING

**FAILURE TO FOLLOW ANY OF THE FOLLOWING WARNINGS MAY
RESULT IN SEVERE INJURY OR DEATH TO YOU OR OTHERS.**

Prior to installing Crimson Trace products, ensure that the firearm is unloaded, the magazine is removed, safety on and finger(s) off the trigger.

DO NOT install or use Crimson Trace product if the installation of the product affects the safe function of the firearm. If, while installing Crimson Trace products, you have any trouble with the fit or functionality of the firearm, **STOP IMMEDIATELY** and call Crimson Trace Customer Service for assistance at 1-800-442-2406.

ALWAYS FOLLOW THE 4 RULES OF FIREARM SAFETY:

1. Handle all firearms as if they are loaded.
2. Never let the muzzle cover anything that you are not willing to destroy.
3. Keep your finger off the trigger until your sights are on the target and you are ready to fire.
4. Be sure of your target and what is beyond.

Remember, the user is **ALWAYS** responsible for the safe use of a firearm.

Crimson Trace recommends that every gun owner take a gun safety course from a certified NRA Instructor before handling or firing your firearm.

INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty.
2. Install CR2 battery into the light side of the Lightguard, positive (+) side facing up (toward gun side).
3. Install the light side (right half) of the Lightguard onto the trigger guard and snap into place.
4. Insert locking grooves of left side into the right at an angle. Apply pressure until both sides join together.
5. Install the two CTC provided screws into the left side (non-laser side) of the Lightguard using the .050" hex wrench (provided). Tighten, drawing two halves together, until there is no gap. Use care to avoid over-tightening as this may cause damage to the Lightguard.
6. To activate Lightguard, slide the master ON/OFF switch upward to the ON position. The switch is located below the light aperture. Press pressure activation pad located in center of front strap directly beneath trigger guard to activate the light.

BATTERY GUIDELINES & REPLACEMENT

Our batteries provide two hours of light illumination under normal conditions. Keep battery compartment free of dirt or other contaminants. Debris inside the battery compartment may affect light operation and performance. Lightguard models use one (1) CR2 lithium battery.

To replace batteries:

1. Ensure that your firearm is unloaded.
2. Check again.
3. Remove Lightguard and old battery.
4. Install new battery in accordance to installation instructions.

WARNING: This product contains chemicals known to the state of California to cause cancer, or birth defects or other reproductive harm.