


INSTALLATION

- 1 ROTATE THE SPRING
- 2 HOLD IT AGAINST THE DUST COVER
- 3 INDEX THE DUST COVER INTO THE HOLE ON THE RIGHT SIDE OF EJECTION PORT
- 4 DEPRESS THE DETENT AND INSERT IT INTO HOLE ON THE LEFT SIDE OF THE EJECTION PORT.

UNINSTALLATION

- ➔ PUSH IN DETENT WITH PUNCH
- ➔ PULL DUST COVER AWAY FROM UPPER RECEIVER

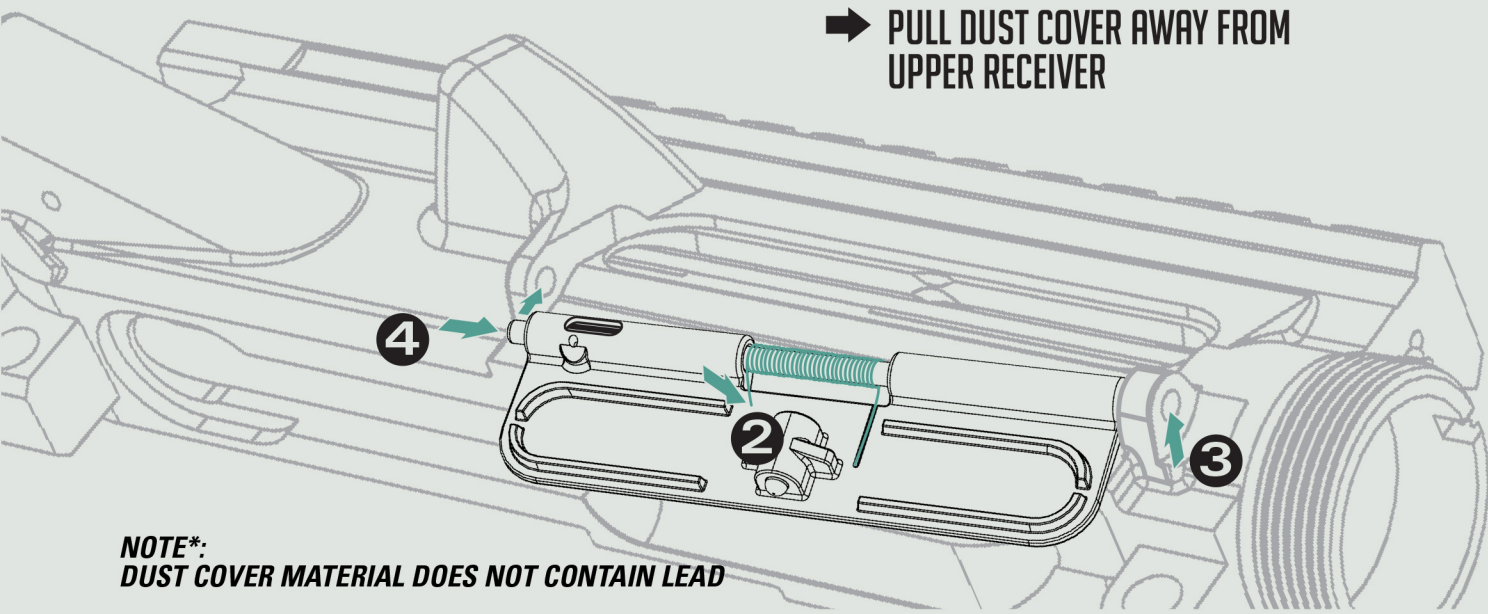

NOTE*:
DUST COVER MATERIAL DOES NOT CONTAIN LEAD