



RUGER AMERICAN® GEN I

Thank you for purchasing this Timney Trigger. It has been designed and manufactured to provide you with a lifetime of dependable service. Each trigger is hand tested and calibrated on a rifle action before leaving our factory. Please read these instructions fully before you begin installing the trigger, you will be glad you did.

TOOLS NEEDED



1/16 Punch




Small Hammer



Needle Nose Pliers



SAE Hex Wrench Set

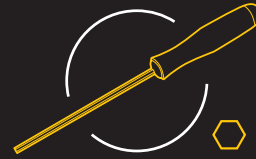

3/32 Hex Drive

TIMNEY TRIGGER GUARANTEE

Material and workmanship: This Timney trigger has been carefully inspected, tested and adjusted to give a lifetime of dependable service. Every possible care has been exercised in its design and construction. If any defect in workmanship or material should develop under conditions of normal use and service, any necessary repairs, including parts and labor will be made at NO CHARGE to the purchaser providing that our inspection reveals parts were not damaged through accident, alteration, misuse, abuse or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume for us any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner without specific authorization, voids the guarantee.




**IF YOU HAVE TROUBLE CHECK OUT TROUBLESHOOTING STEPS ON
WWW.TIMNEYTRIGGERS.COM OR CONTACT US**

Need help with your install? Contact our customer service team via email or phone for assistance.

Phone: 623-223-1111 **Fax:** 623-223-1112 **Support:** technicalsupport@timneyusa.com

INSTALLATION INSTRUCTIONS

- 1** Before beginning work on any firearm, it must first be made safe. While pointing the firearm in a safe direction, remove the ammunition source and double check to ensure the chamber is empty.
- 2** Remove the bolt from the action and then the action from the stock. Using a punch and hammer, drive out the trigger housing roll pins. Then remove the trigger assembly from the action.
- 3** Remove the safety connecting bar and the safety button. Push in on the bolt lock pin and remove the e-clip, then pull the bolt lock pin out and remove the spring. Save these parts for the next step.
- 4** On the new Timney Trigger, install the safety button onto the Timney housing, be sure the slope of the button matches the slope on the housing, then reinstall the connecting bar into the button. Insert the long leg of the bolt lock spring into the housing and the short leg into the bolt lock pin. Push the bolt lock pin in and reattach the e-clip on the opposite side. If installing on a Rimfire® model, you will not reuse the Rimfire® spacer.
- 5** Now it's time to install your Timney Trigger! Slide your Timney Trigger into the action and align the holes on the trigger housing with the mounting holes on the action. Using a punch, tap in the roll pins.
- 6** Insert the bolt and check the function of the safety and trigger. Then reinstall the stock.
- 7** You are now ready to enjoy your new Timney Trigger!

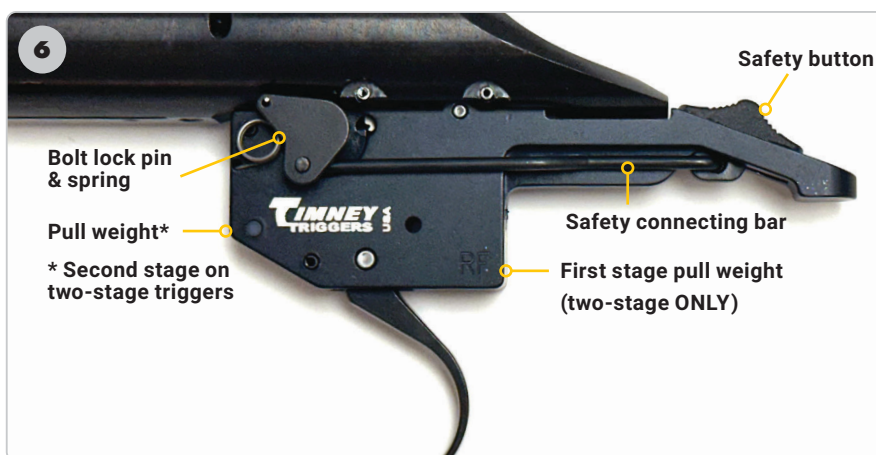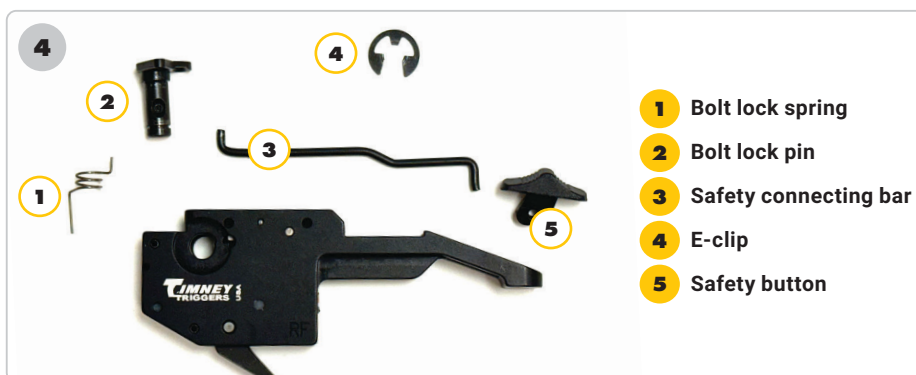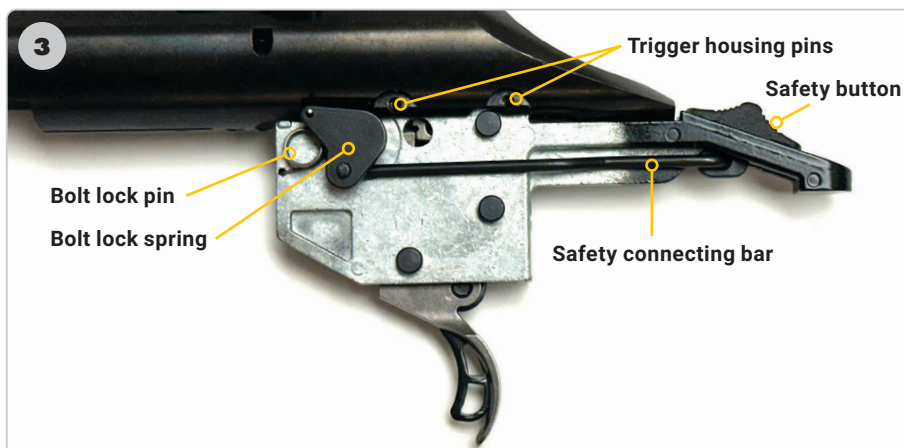

PULL WEIGHT ADJUSTMENT:

NOTE: Be careful when adjusting the pull weight. Do NOT lower the pull weight to below 2 lbs. as this can cause bump/slam firing, "following", or accidental discharge.

- Pull weight is factory set at 3 lbs. and is adjustable from 2 to 4 lbs.
- To lower the pull weight, turn the screw counterclockwise. To increase the pull weight, turn the screw clockwise.

IF YOU HAVE TROUBLE CHECK OUT TROUBLESHOOTING STEPS ON WWW.TIMNEYTRIGGERS.COM OR CONTACT US

Need help with your install? Contact our customer service team via email or phone for assistance.

Phone: 623-223-1111 Fax: 623-223-1112 Support: technicalsupport@timneyusa.com

