

ALPHA COMPETITION FOR RUGER® RXM

Thank you for purchasing this Timney Trigger. It has been designed and manufactured to provide you with a lifetime of dependable service. Each trigger is hand tested and calibrated on an action specific to your platform before leaving our factory. Please **read these**instructions fully before you begin installing the trigger, you'll be glad you did.

TOOLS NEEDED



TIMNEY TRIGGER GUARANTEE

Material and workmanship: This Timney trigger has been carefully inspected, tested and adjusted to give a lifetime of dependable service. Every possible care has been exercised in its design and construction. If any defect in workmanship or material should develop under conditions of normal use and service, any necessary repairs, including parts and labor will be made at NO CHARGE to the purchaser providing that our inspection reveals parts were not damaged through accident, alteration, misuse, abuse or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume for us any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner without specific authorization, voids the guarantee.

IF YOU HAVE TROUBLE CHECK OUT TROUBLESHOOTING STEPS ON WWW.TIMNEYTRIGGERS.COM OR CONTACT US

Need help with your install? Contact our customer service team via phone or email for assistance. **Phone:** 623-223-1111 **Fax:** 623-223-1112 **Support:** technicalsupport@timneyusa.com

INSTALLATION INSTRUCTIONS

- Before beginning work on any firearm, make sure to remove the ammunition source and double check to ensure the chamber is empty.
- Remove the slide from frame, then, using a punch, push out the take down pin and locking block pin. Then remove the slide lock by pushing down on the middle spring.
- Remove the Fire Control Insert by tilting the insert up and out.
- Remove the trigger pivot pin, then remove the locking block and slide stop lever.
- Gently spread the frame of the Fire Control Insert to remove the trigger housing.
- Remove the trigger, trigger bar, and spring from the trigger housing.
- Now you are ready to install your Timney trigger! First install the Timney sear housing into the Ruger® trigger housing. Note: Make sure to push the sear housing all the way in until it is flush along the top of the trigger housing.
- Mate the trigger bar with the trigger housing, then insert the mated trigger bar and trigger housing back into the frame of the Fire Control Insert. Calvin Tech Tip: Insert the circle side first, then insert the oblong side.





















INSTALLATION INSTRUCTIONS

- Slide the return spring into the small hole on the front of the trigger shoe, then click it into place.
- Reinsert the locking block by pushing the return spring back towards the trigger housing, ensuring the trigger pivot pin holes are lined up. Then reinsert the trigger pivot pin from right to left, once it's halfway through, reinsert the slide stop lever then fully insert the pin.
- Now reinstall the Fire Control Insert.
 Start at the rear of the frame, pushing all the way in then lower the Insert into the frame while pushing the trigger shoe back.
- Reinsert the take down pin, then, with the notched side facing the rear, reinsert the slide lock. Finally reinstall the locking block pin.
- Reinstall the slide on the frame then perform a final safety and function check.
- You are now ready to enjoy your Timney trigger!















