 


VECTOR OPTICS



 
USER MAUNAL FOR PARAGON 6x25 RANGEFINDER

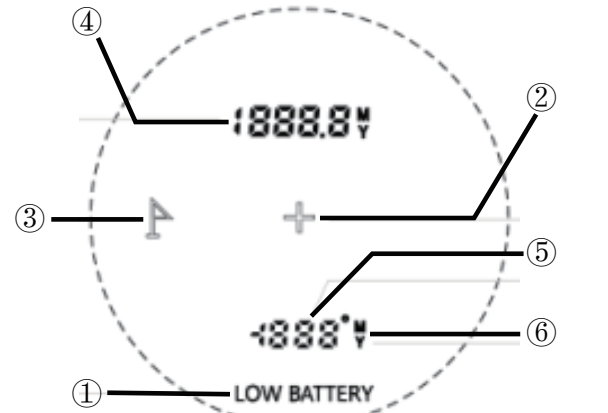

- ① Battery Indicator
- ② Aiming Reticle
- ③ Pinseeker Function Sign
- ④ Incline Angle, Horizontal Distance, Vertical Distance Mode Sign
And Display LOS Distance Value
- ⑤ True Angle, Horizontal and Vertical Distance Value
- ⑥ Unit: M--meter, Y--yard


Power On

Short press Power Button to turn on the unit.
The unit will shut down automatically if no operation after 10 seconds.
The default display at first use will be shown like the pic at below, in the future it will display last setting.

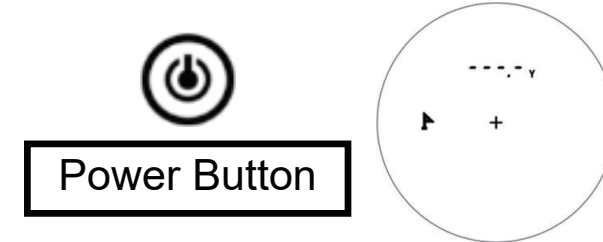


Menu Option

 Press Menu Button 2 seconds, to enter menu mode.
During setting, press Mode Button 2 seconds to quit and back to ranging standby status.

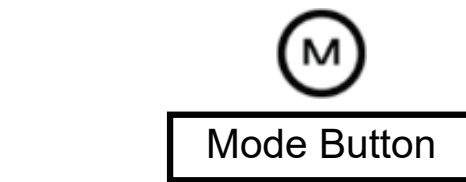


Ranging Mode Option

 At setting mode, press Power Button to choose the blinking mode Auto or Pinseeker mode.
Press Mode Button to confirm the choose and move forward to next menu option.

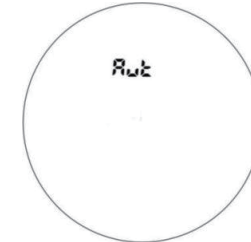


Auto Mode

 Ranging multiple targets, long press power button to scan the targets.
Display ranging distance following the aiming target.

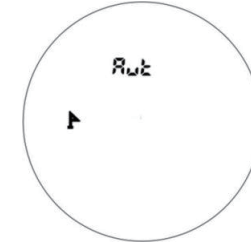

Pinseeker Mode

 Ranging multiple targets, long press power button to scan the targets.
Display the nearest target distance.

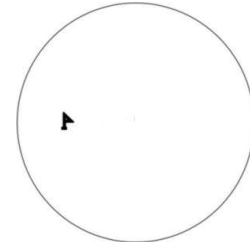


Ranging Mode Option

Press Power Button to choose "Ang", "EVD", "EHD" or "OFF", when it is blinking.
Press Mode Button to confirm the choose and move forward to next menu option.


Off Mode "OFF"

 Short press the Power Button to measure the target.
Only true distance displayed.

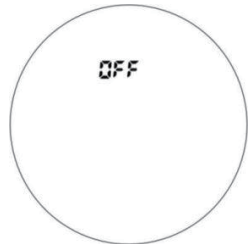


Angle Mode "Ang"

 Short press the Power Button to measure the target.
Will display true distance or angle converting in 1 second.

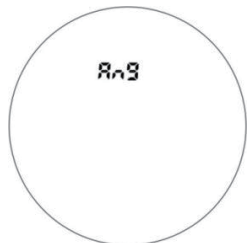


Vertical Mode "EVD"

 Short press the Power Button to measure the target.
Will display true distance or vertical distance converting in 1 second.

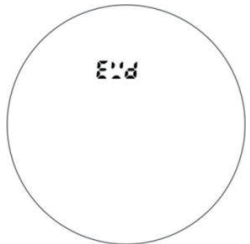


Horizontal Mode "EHD"

 Short press the Power Button to measure the target.
Will display true distance or horizontal distance converting in 1 second

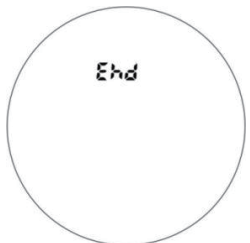

Distance Unit Option

 At the menu mode, M or Y will be blinking, press Power Button to choose Y (yards) or M (meters).
Press Mode Button to confirm the choose and move forward to menu option.

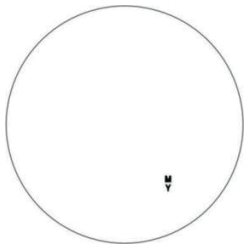


Ranging

Aiming the target, short press Power Button to range distance.
Target distance displayed.
Long press the Power Button to scan mode.

Low Battery Warning

 When the battery voltage lower than 2.4V, low battery warning button will be blinking.
When battery lower than 2.3V, could not range any more, empty low battery warning icon blinking, turned off after 3 seconds.

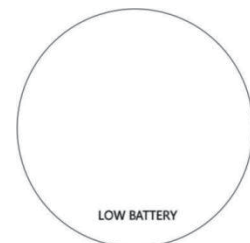

FIVE YEARS LIMITED WARRANTY

Your Vector Optics product is warranted free of defects in materials and workmanship for a period of 5 years from time of purchase by the original purchaser. This warranty covers accidental damage, as well as any defects in materials and workmanship. Batteries, damages caused by misuse or improper handling are not covered. In the event of a defect under this warranty, we promise to repair or replace your product and ship it back to you at absolutely free of charge. Also, this warranty is null and void if modification or maintenance is provided by someone other than Vector Optics. This warranty is non-transferable.

For products not directly purchased from us, please contact the local dealer for applicable warranty in.

For more details please visit our website, thanks for your support.



www.vectoroptics.com