




PRECISION REFLEX INC.
710 STREINE DR.
NEW BREMEN, OHIO 45869


PH.419-629-2603
FX.419-629-2173
www.pri-mounts.com

Installing an SPR PEQ2 Rail Instructions


1. Loosen the 4 screws that hold the rail onto the forearm to allow it to slide back and forth on the forearm.

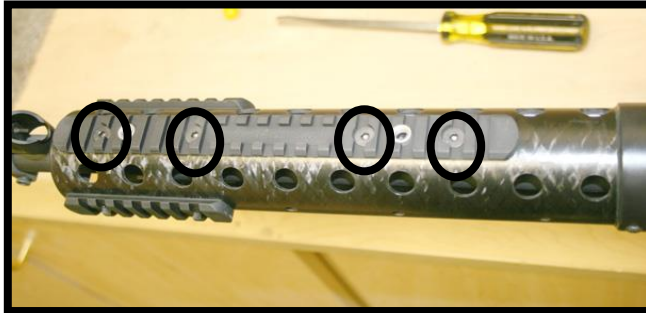

2. Remove the clamp bar from the rail and then roll the rail onto the receiver and the forearm rail. Then line up the 2 lugs on the forearm rail with the 2 chamfered holes on the rail.

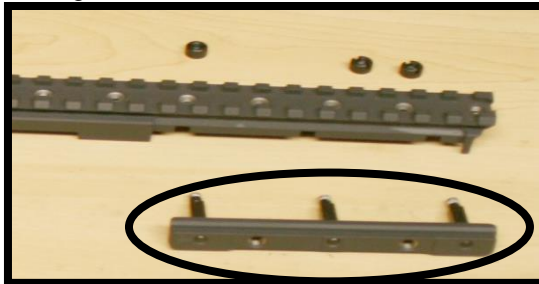

3. Once the alignment is good install the 2 flat head screws that come with the rail. Snug

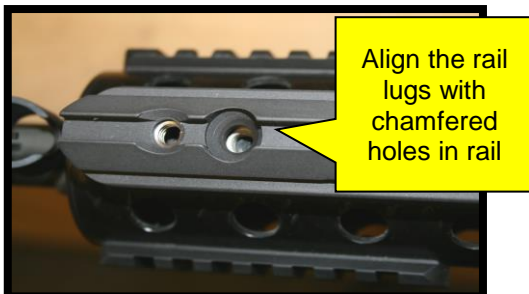

4. Now slide the rail with the forearm rail to align the clamp bar holes up with the receiver.



5. Once the you have your alignment snug the clamp bar nuts. Then take an Allen wrench into holes 1,2,4 and 5 to tighten the forearm rail back into place. You will need to remove the small section of rail were the PEQ2 sits in order to get access to the 2nd hole.



6. Then go back to all the other screws and nuts and tighten them down.

For technical support or questions call us at 419-629-2603 or E-Mail us at info@precisionreflex.com. Also reference the How To Tab on our web site www.precisionreflex.com