



**Spitfire Lightweight Barrel
For Ruger® 10/22®
M-LOK® Accessory Installation Instructions
V1.0**

www.tandemkross.com

For more information or support, contact CustomerService@tandemkross.com

ATTENTION: Before you begin, be certain that the magazine is removed, and the chamber is clear. Follow all safety precautions, and double check your firearm is SAFE.

Installation Guide:




Installation Steps:

- 1) Start by ensuring you have your Spitfire barrel and any M-LOK®-compatible accessories you'd like to attach (e.g. rail panels, adapters, etc).



- 2) To mount your M-LOK® compatible devices, first refer to the manufacturer's instructions.
- 3) Tighten the screws and T-nuts in the part and inspect the amount of thread protrusion on the back face of the T-nut.

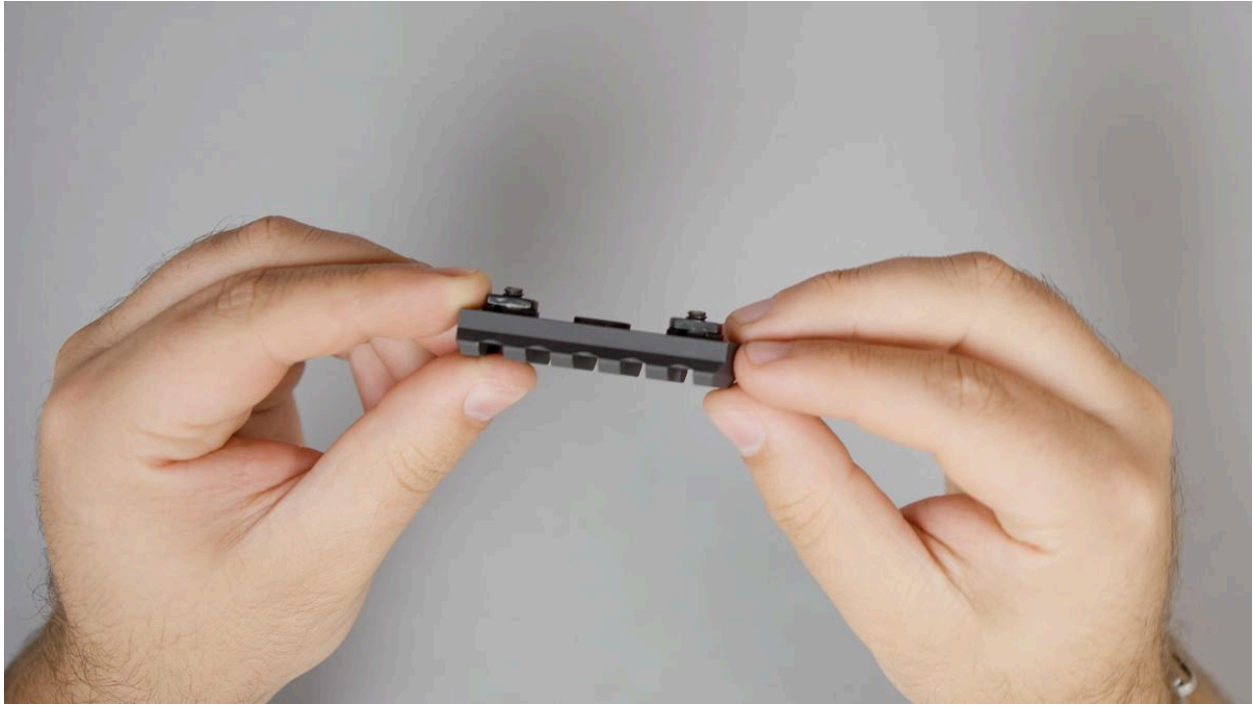

- 4) If the screw's threads extend past the nut, modify the screw by filing down its length until the threaded portion of the screw does not protrude out the back of the T-nut. This ensures the screw won't interfere with the barrel.



- 5) Once the screws are adjusted, install the accessory by securing it to the barrel with the modified screws and T-nuts.



- 6) After tightening, confirm everything is snug and in place.

Thank you!

You have successfully completed the installation of M-LOK® accessories to your TANDEMKROSS Spitfire Lightweight Barrel. Thank you for your support, and if you have any further questions, please reach out to CustomerService@tandemkross.com. Enjoy!