

# WeatherTech®

## ComfortMat Connect



**CORNER PIECE**



**MIDDLE PIECE**



**END PIECE**




**SNAPLINK CONNECTOR**

### Installation Instructions




Turn over your first ComfortMat Connect piece and install the SnapLink connectors into the designated holes as shown, ensuring they are flush with the bottom of the piece.

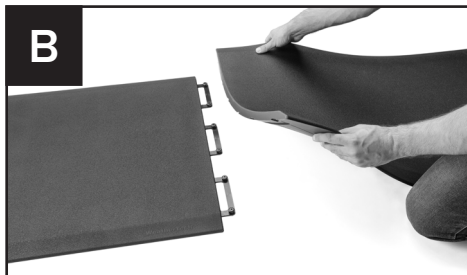

Turn that same piece over and, with the topside facing up, align the edges of the next ComfortMat Connect piece (also with topside facing up).



Press firmly on the topside of both pieces above the SnapLink connectors to ensure they are firmly in place. The parts should now be locked together.

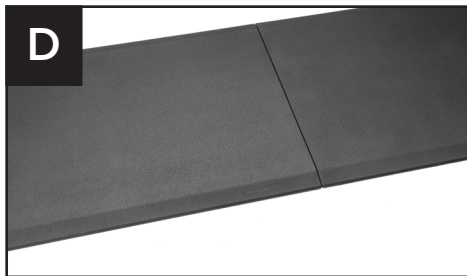

Make sure all ComfortMat Connect pieces are properly connected: the top surfaces should be level with each other. If not, repeat steps B and C.

### Cleaning Instructions

1. Begin by removing any messes or loose debris from the surface of the mat.
2. Using a mild detergent, warm water and a damp cloth, wipe off any lingering dirt.
3. **DO NOT** clean with harsh chemicals or apply silicone-based cleaners (such as Armor All®).
4. Allow to air dry or wipe down with a dry cloth and you're done.

### LET'S TALK

800-441-6287

[WeatherTech.com/warranty](https://www.WeatherTech.com/warranty)



67COMINST02 © 2022 MacNeil IP LLC