




CupFone®


Hand Sanitizer Holder




Loosen and remove the knob from the rear of the sliding CupFone or CupFone XL head while holding your finger over the bolt head on the front.

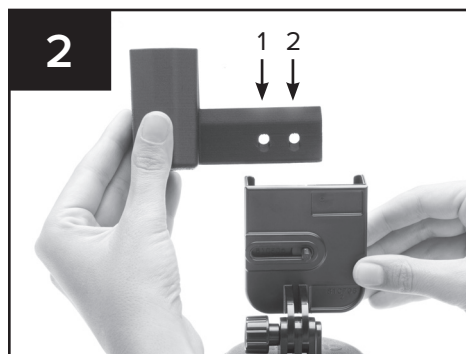

Choose the hole on the Hand Sanitizer Holder that will position it as close to the CupFone head as possible: hole 1 for CupFone, hole 2 for CupFone XL.

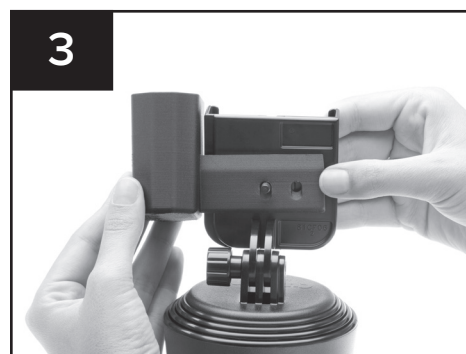

Looking at the back of the CupFone head, while still holding the bolt head in position with your finger, place the Hand Sanitizer Holder on the left side of the CupFone head and over the protruding bolt. The Hand Sanitizer Holder opening should be facing upward.

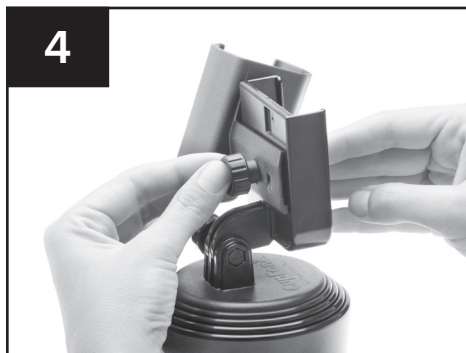

Re-install the knob on the bolt, and adjust for your phone accordingly.



Insert the bottle of PURELL® Advanced Hand Sanitizer into your Hand Sanitizer Holder and then insert the CupFone or CupFone XL into your vehicle's cup holder.



Your hand sanitizer is now in a convenient easy-to-reach location with easy access to pump!

LET'S TALK

800-441-6287 or 630-769-1500

For warranty information, please visit www.WeatherTech.com/warranty

WeatherTech®



Made in USA

67CFS1 © 2020 MacNeil IP LLC