



ENHANCERScope Magnification Doubler

Setup Guide

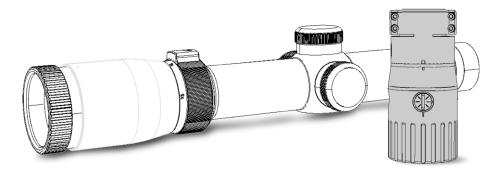

ongratulations on your purchase! The TRYBE™ OPTICS Enhancer doubles the power of most 34mm, 30mm, or 1" scopes by attaching to the end of that size scope tube. Simply connect to your existing sighted-in riflescope and zero the Enhancer. Then just remove or replace the lens to double your magnification with no further adjustment required.

Here's what's included in the box:

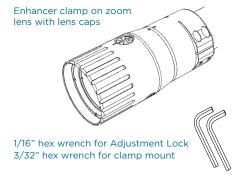

Enhancer Specifications

Magnification	2x
Objective Lens	40mm
Outside Diameter	45mm
Tube Size	34mm, 30mm, or 1-inch tube
Adjustable Turrets	Yes, up to +/-10 MOA
Locking Turrets	Yes
Size	3.3" x 1.7" x 1.7"
Weight	8.2 oz
Assembly	Water-, fog-, and shock- proof


Install the Enhancer onto the Scope

The Enhancer ships with fasteners loosened and prepared to install onto the scope. Remove the rear protective lens cap.

If the Enhancer is being reinstalled, first loosen the 4 clamp mounting screws with the 3/32" hex wrench.

Slide the Enhancer adapter onto the scope. The adapter should slide fully onto the scope until the adapter bottoms out onto the scope.

A Delrin adapter is included with the 30mm version Enhancer to allow attachment to one inch scopes. Insert this into the Enhancer mount before installation on one inch scope tubes.

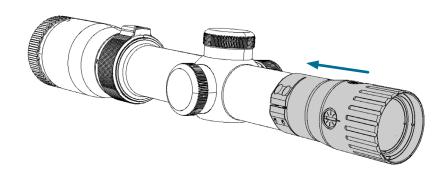


Align the Enhancer with Your Riflescope

Align the top center alignment markings of the Enhancer to the top and center of the scope as shown.

Once the Enhancer is aligned, use the supplied 3/32" hex wrench to tighten the fasteners and secure the Enhancer clamp.


Tighten the fasteners in an X-pattern evenly until fasteners are torqued to 15 in/lb and there is an even gap on each side.

Do not overtighten.

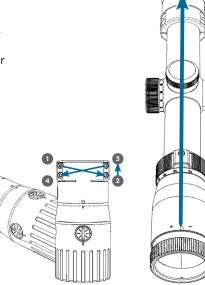

Sight In Your Enhancer


The Enhancer's adjustments are designed to provide horizontal and vertical movement of the point of impact to realign your already sightedin scope. The graduated lines on the Enhancer's windage and elevation screws represent approximately 4 inches (or 4 MOA) at 100 yards. The infinite adjustment possible on the Enhancer ensures zero when sighting in. The included coin fits the adjustment slots perfectly and prevents scratches common with screwdriver use. Your existing riflescope's turrets and zero never need to be adjusted unless you choose to.

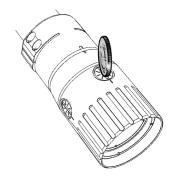



The Enhancer utilizes an Adjustment Lock to ensure no loss of zero under recoil. Before adjusting the turrets on the Enhancer, remember to loosen this screw with the included 1/16" hex wrench, and to secure this screw when final zero is achieved. Snug this screw lightly with about 5 in/lb of pressure. Do not overtighten.


A cartridge type laser boresight may be utilized to shorten the sighting in process. Initial installation of the Enhancer may move your riflescope's existing zero by several inches or more, and recommended distance to target is 25 yards to start.

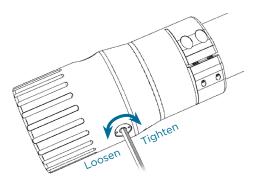


Remove or Reinstall Enhancer Lens

The Enhancer is a 2-piece design; a lens section and mount that are threaded. Once the lens is initially installed and boresighted, it can be removed and reinstalled by hand without change of zero. This allows the scope operator to quickly swap between the scope's native zoom, or thread on the Enhancer for greatly increased magnification and accuracy.

Firmly grab the lens section by hand and turn counter-clockwise to unscrew and remove the lens. Place the provided lens caps on the lens when not in use.

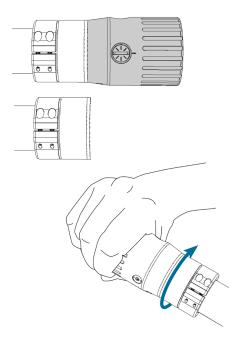

To reinstall the lens, align it to the mount section and carefully thread the lens on by turning it clockwise onto the mount section. Fully thread the lens onto the mount section until the alignment markers are realigned as shown.

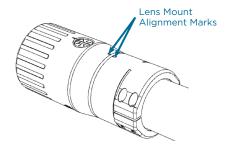

Warranty

TRYBE™ products are made for performance and durability and are covered by a limited lifetime warranty. For full warranty information please visit www.TRYBEdefense.com. Please reach out to our **TRYBE™ Customer Care** team at 1-800-511-4801 or email sales@ TRYBEdefense.com in order to process a warranty claim.

