



USE & INSTALLATION GUIDE

STEP 1:

OPEN CONTENTS AND PLACE IN FRONT OF YOU


- (1) Duracell Lithium™ DL1/3N Battery (or CR1/3n) (1) TR Laser System
- (1) FDA yellow label (2) Battery door screws (2) Hex Keys .050" (2) Locking Screws
- (2) Cotton swabs (1) Mini Phillips screwdriver (1) Battery door

DO NOT REMOVE SERIAL NUMBER FROM UNIT, REMOVING MAY VOID WARRANTY

MAKE SURE PISTOL IS UNLOADED AND ALL AMMO IS
ON A SEPARATE TABLE.

CHECK OUT OUR INSTALLATION VIDEO AT WWW.ARMALASER.COM/

STEP 2: **SEPARATE LEFT AND RIGHT SIDES**

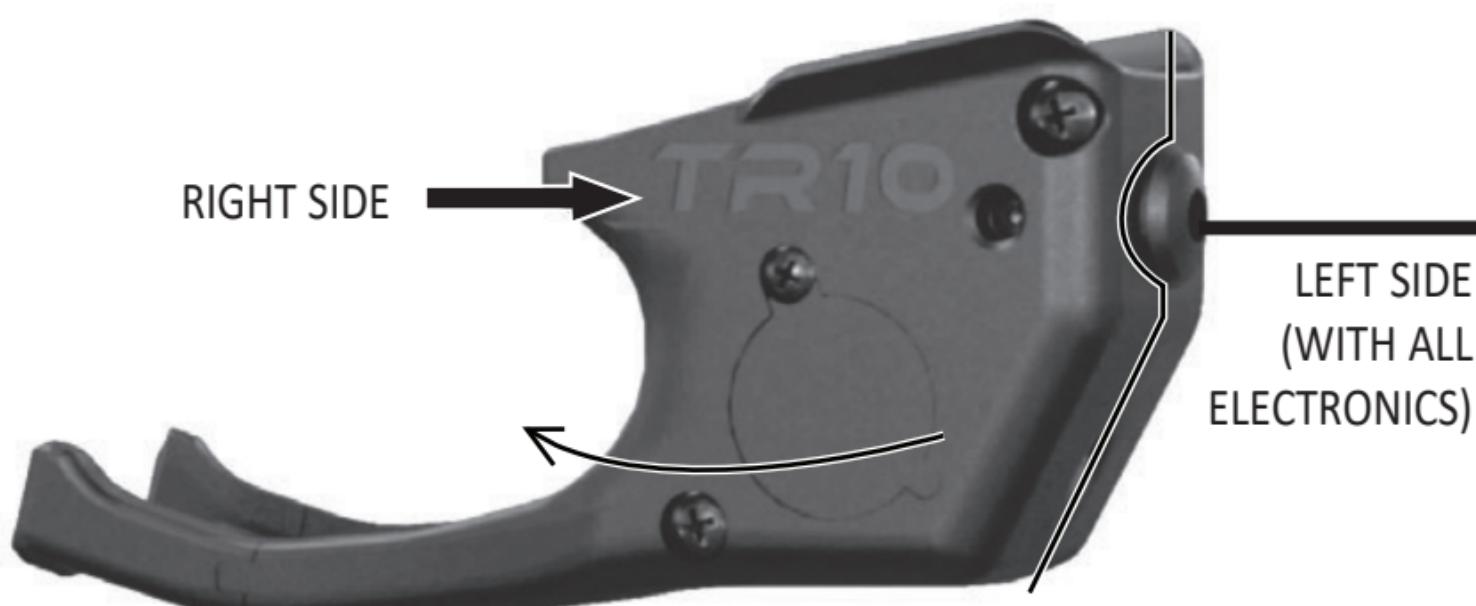

STEP 3: HOOK TR ON TO PISTOL

USE LEFT SIDE FOR THIS STEP

Installing TR is quick and easy provided that it is first properly positioned on your pistol. Note: points 1 & 2.

Also note direction
of the thumb pressure.

Now squeeze TR onto
your pistol.



STEP 4: **INSTALL RIGHT SIDE OF TR**




Hook the right side of TR into latch as shown. Press both halves together.



STEP 5:

Screw down both locking screws from toolkit in holes indicated while squeezing both halves together. Your TR unit has one of these two hole configurations. Do not force screws.

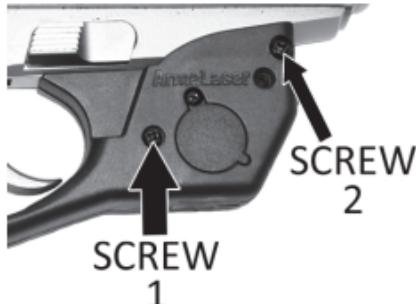


STEP 6:



Insert battery with the negative side touching the spring.

STEP 7:

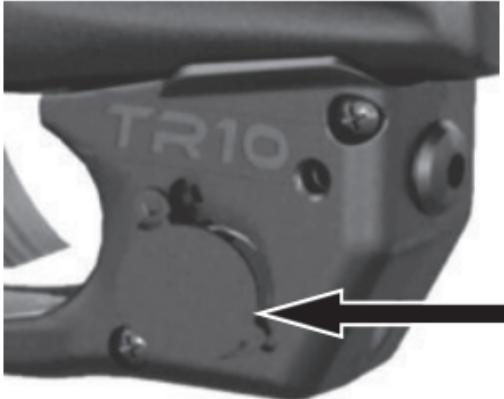

Hook tab on battery door into TR and swing door shut. Secure door as shown using an included battery door screw and the mini Phillips head screwdriver from your toolkit.




STEP 8: PROGRAMMING

By default, your TR unit will fire the laser with a steady beam whenever the gold touch sensor near the grip is activated. This can be changed to a pulsing beam at your preference. Battery removal will revert TR to default factory settings. Use the pictured button on the bottom of the unit to change beam mode or power unit on/off.

Beam mode:

Click 2 times to toggle between steady or pulsing beam mode.

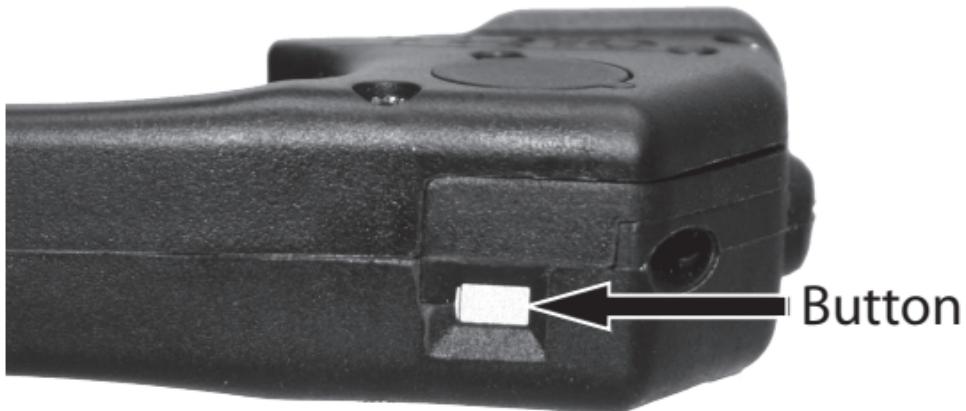

Power On or Off:

Click and hold for 2 seconds

STEP 9: ADJUSTING WINDAGE & ELEVATION

For best results, adjust TR to your iron sights at a flat wall approximately 20 feet away. Fine tune dot placement at shooting range. **DO NOT rotate hex key more than 1 full turn in either direction.** Unit arrives sighted from factory and will only require minor adjustment.



ADJUSTING WINDAGE (LEFT/RIGHT)

Insert the hex key into windage hole shown.



MOVES DOT
LEFT



MOVES DOT
RIGHT



ADJUSTING ELEVATION (UP/DOWN)

Insert the hex key into the elevation shown.



MOVES DOT
UP



MOVES DOT
DOWN

CLEANING LASER LENS

Occasionally, burned powder and debris can coat the laser lens causing blurry/fuzzy or a weakened appearance of the dot. Insert the larger end of the supplied cotton swab directly into the laser lens and rotate several turns, while applying gentle pressure. If this does not improve the appearance of the lens, try again, this time moistening the tip of the cotton swab by dipping it into rubbing alcohol. After cleaning with alcohol, allow a few minutes for lens to dry.

TROUBLE SHOOTING?

Here are a few tips if you experience issues with your TR:

LASER SHUTS OFF DURING SHOOTING: We recommend and equip TRs with Duracell brand batteries. This is because Duracells don't lose voltage when exposed to harsh recoil like some other brands can.

LASER DOESN'T ADJUST: Take your hex key and rotate both the elevation and windage set screws counter-clockwise so they are just slightly out of the surface. If adjustment system is functional, the red dot should appear in the upper-left of your sight picture. Rotate each screw back in until red dot starts to respond.

If you experience any issues at all please don't hesitate to contact Customer Care at 800-680-5020 or customercare@armalaser.com

WE WANT TO HELP.

FDA LABEL MUST BE ADHERED TO FLAT SIDE OF FRAME OR SLIDE



GENERAL LASER SAFETY: CAUTION - Use, controls or adjustments, or performance of procedures other than those specified herein may result in hazardous radiation exposure.

NO SERVICE ALLOWED: Maintenance specifically is **limited** to housing cleaning and battery replacement. **CAUTION:** Perform all maintenance with power off to avoid accidental exposure. No maintenance required to keep product in compliance.

WARNING STATEMENT: DO NOT POINT LASER AT PEOPLE, ANIMALS, OR SHINY AND REFLECTIVE SURFACES. LASER LIGHT. AVOID DIRECT EYE EXPOSURE.

OUTPUT PARAMETERS RED LASER:

630-650nm
<5mW CW
Beam Diameter:<5mm
Beam Divergence:<1.5mRad
Mode:TEM00

OUTPUT PARAMETERS GREEN LASER:

510-530nm
<5mW CW
Beam Diameter:<5mm
Beam Divergence:<1.5mRad
Mode:TEM00

ARMALASER INC.

3801 NW 40th Terrace, Suite B
GAINESVILLE, FL 32606
WWW.ARMALASER.COM
TEL: 800-680-5020